


Arris signs are designed to provide years of trouble-free service. As with any product, however, proper care will keep your signs looking and functioning well.

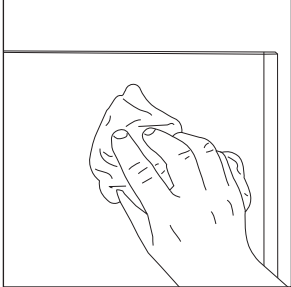

Proper care for your sign finish is important, as harsh cleansers and solvents can permanently damage aluminum finishes as well as the molded plastic components. Always clean by wiping with a soft, lint-free, damp cloth, taking care to wipe gently and not rub.

For stubborn dirt, wash with a very mild solution of liquid hand detergent and lukewarm water. Use a soft cloth or sponge. Dry by blotting with a damp cloth or chamois. Do not dry by rubbing with a dry cloth.

Avoid using products such as window cleaners, liquids containing ammonia, scouring compounds, gritty cloths, gasolines, or solvents (alcohol, acetone, kerosene, carbon tetrachloride, naphtha, spirits or any aromatic hydrocarbons).

Important: Before cleaning with any sort of liquid and/or damp cloth, if your sign features a digitally printed display or paper insert, you should remove that display from the frame before cleaning, as the moisture could permanently damage the display.