

Retention Clips aid in maintaining flatness for the un-supported edge of the Clear Lens. They work for signs mounted either in the Vertical or Horizontal orientation.

Attach Retention Clips after installing the sign to the wall and clear lens is replaced. Clips should be located in the middle of the two 'Closure Extrusions' of the assembly (see below). It's recommended to use Retention Clips for all signs with Closure Extrusions equal to or larger than 24". Part code:

1. Refer to enlarged detail of the Lens Retention Clip in Fig 1. Push clip directly on the narrow aluminum rail, the clip will snap over the angle edge.
2. Adjust the location of the clips if necessary, by holding and sliding, so they are approximately in the middle of each side of the sign.
3. Remove clip by pressing down the small flange. Do not pry off. The clip will tilt and the back angle is exposed. See Fig. 2 Now rotate the clip to release from the narrow rail. See Fig. 3

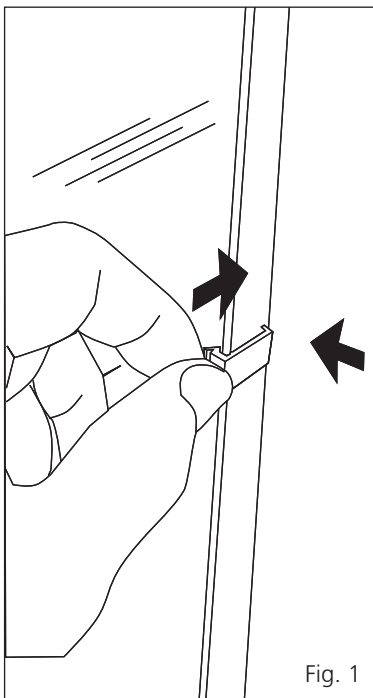
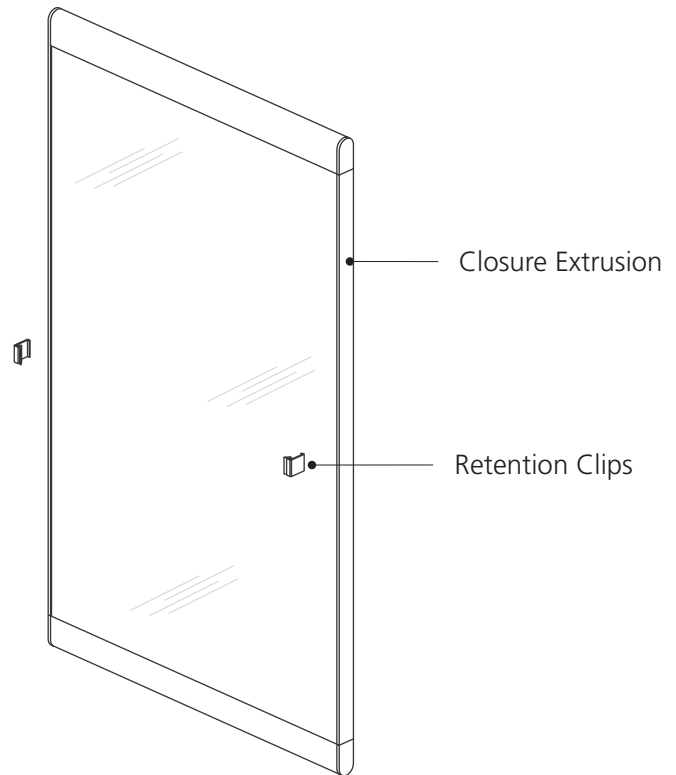
 


Fig. 1

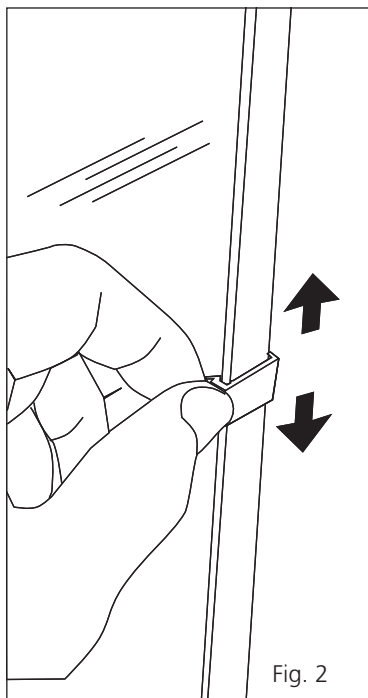


Fig. 2

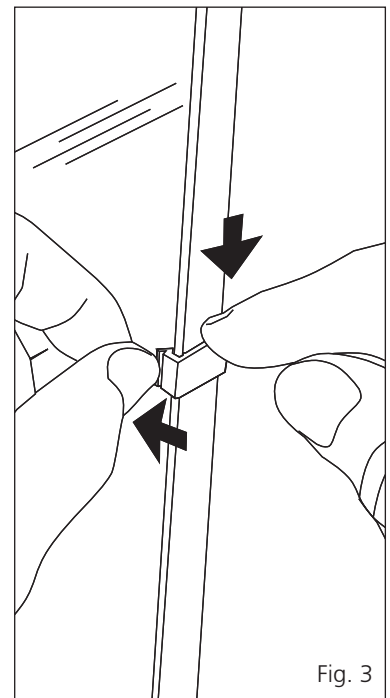


Fig. 3