


Clear Lens Removal and Insert Installation

1. Remove the four set screws that are located on the side of the Edge frame. There are two set screws on each side.
2. Once the set screws are removed, lift the side rails off of the frame.
3. Press Arris suction cup tool firmly on the bottom of the clear lens and lift up.
4. Once the clear lens is lifted up, pull out from the frame at the bottom. Once the bottom of the clear lens is removed from the frame, pull the clear lens down to remove from the top frame.
5. Insert your paper insert by sliding it into the top frame as far as it will go, which will provide clearance for the bottom of the insert to fit into the frame opening. Push in the insert, and it should drop into the bottom frame.

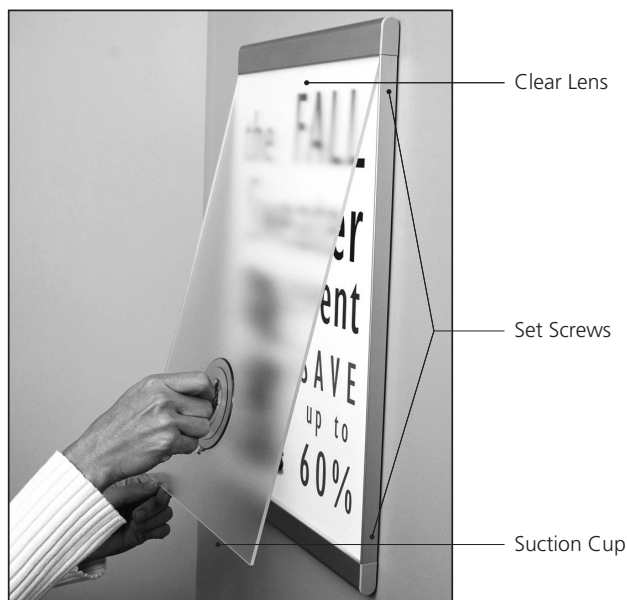

Clear Lens Replacement

1. Insert the clear lens into the top frame by lifting up from the bottom and pushing the clear lens into the top frame as far as it will go. This will provide clearance for the bottom of the clear lens to fit into the frame opening.
2. Push in the clear lens on the bottom, and the clear lens should drop down into the bottom frame.
3. Replace the side rails that were removed on the left and right side.
4. Reinstall the four set screws that keep the side rail installed and capture the lens.



Scan QR code for video instructions on YouTube.